



DA-110RS

digital dictate station



DAC

For product information, visit:
www.dacsolution.com

Copyright 2014 Digital Accessories Corporation

DAC

Setup

1. Using the telephone line cord supplied, plug one end into the unit's **Data** jack (located on the bottom), and the other end into the system or phone jack.
2. Connect the power adapter to the *A/C* jack on the unit's left side.
3. Plug the handset cable into the unit's **Handset** jack (located on the bottom), and the other end into the handset.

Auto-Log

One-touch dialer #10 (bottom right) is used for the Auto-Log feature. If the **Auto-Log** switch is on, whatever is programmed to this dialer will automatically be dialed. This could be a phone number or perhaps user ID.

The **Auto-Log** switch is located on the back of the unit.

DIP Switches

There are four DIP switches located on the bottom of the unit. Switches 1 & 2 determine which emulation the unit uses.

DIP Switch 1: On=Dictaphone emulation (DIP switch 2 must be off).

DIP Switch 2: On=Lanier emulation (DIP switch 1 must be off).

DIP Switch 3: Not used.

DIP Switch 4: On=Programming enabled. Off=Programming disabled.

Programming Dialers

Before proceeding, verify that you have followed **Setup steps 1-3**, that **DIP switch 4 is on**, and that the **Auto-Log switch is off**.

1. Pick up the handset and then connect to your system (this may require entering a user ID and even dialing a telephone number).
2. Press **Store**.
3. Dial the number(s) you wish to have stored.
4. Press the one-touch dialer you desire to program.

Repeat steps 2-4 for additional dialers.

Emulation

There are 2 different emulations for this model. The emulation determines what digits are sent with the handset functions. You may change the emulation at any time with the DIP switches.

Name	Record	Incremental REW/Play	Stop
Dictaphone	2	3	1
Lanier	2	3	4