



DA-113/SM & SB

digital dictate station



DAC

For product information, visit:
www.dacsolution.com

Copyright 2014 Digital Accessories Corporation

DAC

Setup

1. Using the telephone line cord supplied, plug one end into the unit's **Data** jack (located on the back), and the other end into the system or phone jack.
2. Connect the power adapter to the A/C jack on the unit's left side.
3. Lift the dialer directory card and plastic off the top. Remove the plastic tab from underneath. This activates the internal battery for dialer memory.
4. Plug the hand microphone into the round jack on the back of the unit.

Auto-Log

One-touch dialer #10 (bottom right) is used for the Auto-Log feature. If DIP switch 4 is on, whatever is programmed to this dialer will automatically be dialed. This could be a phone number or perhaps user ID.

DIP Switches

On the bottom of the unit, there are four DIP switches. To access them, you must slide the plastic cover down. In addition, there are four DIP switches located underneath the dialer directory card on the top of the unit; these are not used. The functions for the bottom four are listed below.

DIP Switch 1: On=60 milisecond record delay. Off=180 milisecond record delay.

DIP Switch 2: On=A # is entered after a barcode is read.

DIP Switch 3: On=If C-Phone Emulation, a 1 is sent when the microphone switch moves to Stop from Listen.

DIP Switch 4: On=Enables Auto-Log for dialer #10.

Flash

On the back of the unit is a switch labeled **FLASH**. There are three options: **600**, **300**, or **100**. Always leave it to **600** or you may have issues with the **DISCONNECT** function.

Programming Dialers

Before proceeding, verify that you have followed **Setup steps 1-3** and that **DIP switch 4 is off**.

1. Press **Log On** and then connect to your system (this may require entering a user ID and even dialing a telephone number).
2. Press **Store**.
3. Dial the number(s) you wish to have stored.
4. Press the one-touch dialer you desire to program.

Repeat steps 2-4 for additional dialers.

Emulation

There are 3 different emulations for this model. The emulation determines what processor your unit has and thereby what digits are sent with certain functions.

C-Phone will have **-C** at the end of the model (DA-113/SM-C).

DVI will have **-D** at the end of the model (DA-113/SM-D).

Lanier will have **-L** at the end of the model (DA-113/SM-L).

Voice Solutions will have **-S** at the end of the model (DA-113/SM-S).

Name	Processor	Record	Rewind	Play	Stop	New Job
C-Phone	L-403-2	D	7	B	B	8
DVI	L-203-2	D	B	3	A	*9
DVI-1	L-603-2	2	B	3	A	*9
Lanier	L-503-2	2	3	1	4	5
Voice Solutions	L-303-2	D	B	C	A	**

NOTE: You can see the processor version on a sticker located beneath DIP switch 4, on the bottom of the unit. To see it, you must slide the plastic cover down.

DA-113/SB User Guide

To Connect:

Press the **Log On** button.

To Scan:

Press the **Scan** button on the back of the microphone and direct the scan beam at the barcode you wish to scan. You will hear a series tones as it scans.

Microphone Operation:

The microphone has a single slide function control for Record, Stop, Reverse & Play functions.

- Slide the control up to **Record**.
You may begin talking after the record verification tone.
- Slide the control back to **Stop** recording.
- Slide control down to **Rewind** - release to **Play**.
- Press the **Next Job** button to start a new job.

To Disconnect:

Press the **Disconnect** button.